



File Name: bt diverse 5200 manual.pdf
Size: 2602 KB
Type: PDF, ePub, eBook
Category: Book
Uploaded: 24 May 2019, 20:28 PM
Rating: 4.6/5 from 597 votes.

Status: AVAILABLE

Last checked: 19 Minutes ago!

In order to read or download bt diverse 5200 manual ebook, you need to create a FREE account.

[**Download Now!**](#)

eBook includes PDF, ePub and Kindle version

- [Register a free 1 month Trial Account.](#)
- [Download as many books as you like \(Personal use\)](#)
- [Cancel the membership at any time if not satisfied.](#)
- [Join Over 80000 Happy Readers](#)

Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with bt diverse 5200 manual . To get started finding bt diverse 5200 manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



Book Descriptions:

bt diverse 5200 manual

Right hand side Takes you into the redial list. Left hand side Allows you to make an internal call. They are shown in boxes like this. If you experience any difficulties with your Diverse 5200 Additional Handset and Charger, please call the BT Diverse Helpline on. Please refer to your BT Diverse 5250 guide to see what further menus are now available. Press to get to your Mailbox and access your text messages, voicemail and Calls list. One BT Diverse 5200 Charger One BT Diverse 5200 handset One power supply for the charger Two AAA rechargeable batteries Battery compartment cover One belt clip Date of purchase. Using an unauthorised power supply will invalidate your guarantee and may damage the telephone. Power supply number is C39280Z4C478. For the handset use only AAA 1.2V Nickel Metal Hydride NiMH rechargeable batteries with a minimum capacity of 700 mAh. The BT Diverse 5200 additional handset will be easily registered once you complete the steps 1 to 3 below. Situate your product close enough to the mains power socket so that the cable will reach. After approx. Leave the handset for approx. 16 hours in the base station to charge the batteries, as they are not charged in the factory. Press the navigation button to select the handset you want to deregister. Press the options button. Press the navigation button until the display shows Press the options button. This is normal. Under ideal conditions, the handset batteries should give about 13 hours talktime or 170 hours standby time on a single charge. However, new NiMH batteries do not reach their full capacity until they have been in normal use for several days. This will take you back one step. Keep pressing the button to return to the idle screen. Press and hold the button to switch the handset off. Press and hold the button to switch the handset on again. You can test the handsfree function by dialling the BT speaking clock on 123. button. button to Dial the number Press the button.
<http://www.holidayhomecare.co.nz/userfiles/comederos-para-pollo-manuales.xml>

- **bt diverse 5200 user guide, bt diverse 5200 manual, bt diverse 5250 manual, bt diverse 5200 manual pdf, bt diverse 5200 manual download, bt diverse 5200 manual free, bt diverse 5200 manual software.**

During a call you can switch to handsfree mode Press the The call is transferred to the loudspeaker. Press the button to switch back to using the handset. If you need to replace the handset in the base station during a call, for example, because the battery is flat,. Letters are always added to the left of the cursor. Press to switch between capitals and lower case. Press to move the cursor. Press to delete from right to left. Enter the first letter of the name you want, e.g. for Emma, press twice to search for names beginning with E. Press the button. It is recommended that this is used for special numbers i.e. doctor, dentist, takeaway numbers. Press the button. Press the options button. Press the navigation button until the display shows Press the options button. Press the options button again. Enter the name for details, see page 17. Press the A list of all the handsets that are registered to the base are listed, you can select any of them. Your handset is identified by Press the button to highlight the handset you want to call and. During a call Press the options button to display the list of handsets. Your caller hears musical tones. Press the navigation button to select the handset you want to call. For more information on BT's Calling Features call BT free on If you subscribe to a Caller Display Service you can see who is calling you. Press the Press the navigation button until the display shows, e.g. In this example, you have received 3 new calls and you have 7 old calls calls you have already viewed. Press the The display shows Enter the name of the person using the keypad. Press the button. The display shows Press the The display automatically returns to show the Calls list. Press the navigation buttons to toggle between callers. Your Diverse 5200 additional handset

helps you use your Network's special services. For full details ask your Network provider. Press the button until the display shows Press the. You may be charged a subscription fee. <http://mastervin.ru/files/comed-electric-service-manual.xml>

You can divert all incoming calls to another number where you can be reached. Press the button until the display shows Press the until you reach the idle display. See your BT Diverse 5250 user guide for further information. Press the button until the display shows Press the. The display shows Press the. You hear the current handsfree volume. Press the navigation button to set the volume level you want. Press the options button. Press the navigation button to select the ringer melody. Select whether external calls or internal calls Press the options button. Press the navigation button to set the ringer melody you want. You can also set this to sound only during a call. The handset's Registration, the Directory and the Calls list are not affected. Press the navigation button until the display shows Press the options button. If the number is already assigned to another handset you hear a beep. Select another number. If required, press the navigation button to select another handset and use the Keypad to change the number. Press the options button to confirm. Right hand side Right hand side Takes you into the redial list. Takes you into the menu options Left hand side Green phone Allows you to make an MENU internal call. For making and answering calls. They are shown in boxes like this. Press to get to your Mailbox and access your text messages, voicemail and Calls list. For guarantee purposes proof of purchase is required so please keep One BT Diverse 5200 your receipt. Charger One BT Diverse 5200 handset One power supply. Using an station with a damp not wet cloth, or unauthorised power supply will an antistatic wipe. Never use household invalidate your guarantee and may polish as this will damage the product. The BT Plug the power supply cable into the Diverse 5200 additional handset will power socket on the underside of your be easily registered once you complete charger.

You will need to button to display the list of recharge your handset before you can internal handsets registered use it. The various states of charge to the base. This is normal. Press the options button. Under ideal conditions, the handset Press the navigation batteries should give about 13 hours button until the display shows talktime or 170 hours standby time on a single charge. This will take Enter the phone number first. Press the button. Press the options button. The call is transferred to the Display shows loudspeaker. Enter the telephone number. Press the options button to enter the name. Enter the name. During a call you can switch to Entering names handsfree mode. Letters are always added to the left of the cursor. Press to delete from right to left. It is recommended Press the navigation that this is used for special button to scroll to the entry numbers i.e. doctor, dentist, you want to delete. Press the options button. A list of all the handsets that are registered to the base are listed, you can select any of You can forward an external. For more Calls list, as there is no telephone information on BT's Calling Features number sent via the Network. Press the button. Press the navigation button until the display shows, Press the options e.g. button. In this example, you have Press the navigation received 3 new calls and you. Press the options button. The display shows The number is displayed. Press the options button. The number is dialled and your number is withheld for this call. For full details ask your Network provider. You may be charged a subscription fee. Select Press the options button. You can divert all incoming Enter the telephone number calls to another number where you want your calls diverted to. The entire number should Display shows look like this. Press the options button. Press the navigation Press the navigation button to select the ringer button until the display shows melody. Press the options button.

The handset's Registration, Press and hold the button. If the number is already assigned to another handset you hear a beep. Press the options button to confirm. A total REN of 4 is allowed per telephone line. Were committed to dealing with such abuse according to the laws in your country of residence. When you submit a report, well investigate it and take the appropriate action. Well get back to you only if we require additional details or have more information to share. Note that email

addresses and full names are not considered private information. Please mention this; Therefore, avoid filling in personal details. The manual is 1,47 mb in size. If you have not received an email, then probably have entered the wrong email address or your mailbox is too full. In addition, it may be that your ISP may have a maximum size for emails to receive. Check your email Please enter your email address. Post your question here in this forum. We're committed to dealing with such abuse according to the laws in your country of residence. We'll get back to you only if we require additional details or have more information to share. Note that email addresses and full names are not considered private information. Please mention this; Therefore, avoid filling in personal details. Please enter your email address. The handset is now registered and the handset display will return to the idle screen. If the base is not a 5210 or 5250 you will need to follow the user guide for the base station you are registering the 5200 handset to. To manually register a BT Diverse 5200 handset to another base station If you want to register your handset to another base station you will need to manually register it. On the handset to be registered Press the MENU options button. Press the DOWN navigation button until the display shows Handset Settings. Press the OK options button. Press the DOWN navigation button until the display shows Register Handset. Enter system PIN. Press the OK options button.

MENU OK OK OK Note If all internal numbers have been assigned then the internal number 6 will be reassigned. You can change the internal handset number if you wish, see page 35. Note To make internal calls or page handsets, see page 21. To give a handset a name rather than a number INT 1 Change Handset Name To switch keyguard on and off 37 To change the internal number of a handset Edit Handset No. 38 Base Station settings To change the base station PIN Base Reset System PIN Base Station PIN Personal Identification Number To reset the base reset to default 39 To set repeater mode Repeater Mode Change repeater setting Repeater mode Each handset can only be registered with one base at a time. The next available internal number 26 has been automatically assigned to the handset. 41 To manually register a BT Diverse 5200 handset to another base station Register Handset 42 To deregister a handset Deregister Handset deregister handset. If you are here, it was rather the case. However, you are not the only person having problems with keeping the operation manual of all household devices. Below are few guidelines regarding how and why you should collect the product manuals. However, we believe that the manuals should include the most important and needed information about BT 5200, not to discourage the user to read. Obviously, if a device BT 5200 has multiple advanced functions, we will not avoid a high amount of information in this document. Then, it will be much easier to find it than look through the purchase boxes which have already been thrown away by you or any other of household members. It will be enough to clear the drawer once in a year and throw away any manuals of the devices you do not use anymore. Thus, you can avoid storing any unnecessary documents and keep only those which are valid. You can also download and print the manual BT 5200 to place it in your drawer.

Please check your inbox, and if you can't find it, check your spam folder to make sure it didn't end up there. Please also check your spam folder. A quarterly fee may be payable. Some other network provider lines may not be compatible with this text messaging service. A quarterly fee may be payable. Alternative arrangements should be made for access to emergency. Mobile and international call costs may vary. Your BT Synergy works by sending radio signals between the handset and base. The strength of the signal depends on where you site the base. Putting it as high as possible ensures the best signal. Any obstruction between the base and handset will reduce the range significantly. With the base indoors and handset either indoors or outdoors, the range will normally be up to 50 metres. Thick stone walls can severely affect the range. When out of range of the base the icon will flash and the outofrange tone will sound every minute. This tone is repeated until Do not connect the telephone line cord into the wall socket until the handset is fully charged. Only use the power and telephone cables supplied with the product. New batteries are When the handset is fully charged the icon will indicate that it is fully charged. The date and time is recorded

with each answering machine message you receive. Please see page 30 for these instructions. Press to select options displayed on screen. In menu mode, press to step back one screen. In standby, press names to open the phonebook menu. When off, press to switch the handset To unlock, select Unlock and follow Flashes if you move out of range. Answering machine is On. To exit the menu and return to standby press. Add Entry Show Details Edit Entry Delete Entry The handset display shows The handset will If you make a mistake press Clear to delete the The display shows External Call and the caller's number or, if the number matches an entry stored in the phonebook, the name is displayed. The display shows the level.

The display shows Secrecy On and your caller It also enables other people To switch handsfree You can then select any When the call is ended, the keypad lock comes on again. The phonebook menu is displayed. The display Press Select. The list of entries is displayed. The first name beginning with that letter is displayed. Press Select. Scroll or to the handset you want and press Select. Copy Phonebook is prompted on the receiving handset. Press Yes to accept or No to cancel. When completed the display shows 1 Entry Copied. Press Select. Scroll or to the handset you want and press Select. When completed the display shows the number of entries copied. Press Yes to begin copying or No to cancel. Press the MENU options button. Press the DOWN navigation button until the display shows Audio Settings. Press the DOWN navigation button until the display shows Advisory Tones. Press the OK navigation button to switch the key tones On or Of f. Press the DOWN navigation button to move to the next line. Press the UP or DOWN navigation button t o switch the batter y low beep On or Of f or to sound only during a call. Press the OK options button to confir m the settings. Press the RED PHONE button until you reach the idle display. OK OK OK OK OK MENU T o switch auto talk on or off When you receive a call, you can answer it simply by lifting the handset of f the base station. This is called autotalk. When you switch autotalk of f, you answer all calls by pressing the GREEN PHONE button. The display shows Auto Answer. A indicates auto talk is switched on. Press the OK options button again to switch autotalk of f. Press the RED PHONE button until you reach the idle display. U kunt hieronder aangeven waarom deze vraag ongepast is. Wij controleren de vraag en zonodig wordt deze verwijderd. Emailadressen en volledige namen worden niet als privegegevens beschouwd. Wij vragen u dus ook te reageren op een antwoord. Laat uw emailadres achter op deze site, zodat u op de hoogte blijft.

U krijgt dan ook andere vragen en antwoorden te zien. De handleiding is 1,47 mb groot. Als u geen email heeft ontvangen, dan heeft u waarschijnlijk een verkeerd emailadres ingevuld of is uw mailbox te vol. Daarnaast kan het zijn dat uw internetprovider een maximum heeft aan de grootte per email. Omdat hier een handleiding wordt meegestuurd, kan het voorkomen dat de email groter is dan toegestaan bij uw provider. Controleer uw email Vul dan hier uw emailadres in. Find out more. All about cookies OK Carry on. NiMH batteries are the direct replacement for the old NiCd batteries. New batteries should be charged as your instruction manual. This is normally between 1624 hours. You should ensure that new batteries for your BT Diverse 5200 are installed correctly in the phone and that the terminals in the phone are in good contact with the batteries. Alternative arrangements should be made for access to emergency services. This product is intended for connection to analogue public switched telephone networks and private switchboards in the UK. Right hand side Takes you into the redial list. Right hand side 1 Takes you into the menu options Left hand side Allows you to make an internal call. INT MENU For making and answering calls. Handsfree Use to answer calls or make a call in handsfree mode. Red phone Press to end a call, return the display to idle or turn the power on and off. To increase the loudspeaker volume. To skip forward to the message after next. Skip DEL Page To repeat the current message. To skip back to the previous message. Illuminates when set to Answer On. Flashes to indicate new messages e.g. Calls or SMS. Remains constant when you have old messages stored. INT MENU For calling other handsets. Opens the menu. Shows the status of the handset battery. Scroll through the menu. OK Confirms the function displayed. Scroll left and right when entering numbers or messages.

Using an unauthorised power supply will invalidate your guarantee and may damage the telephone. Power supply number is C3928 0Z4C478. Cleaning Simply clean the handset and base station with a damp not wet cloth, or an antistatic wipe. Never use household polish as this will damage the product. Never use a dry cloth as this may cause a static shock. Make sure it is at least 1 metre away from other electrical products to avoid interference. SETTING UP Do not situate the product in the bathroom or other humid areas. Remove the protective plastic film from the display. INT MENU Insert the batteries Under no circumstances should nonrechargeable batteries be used. Only use AAA 1.2V Nickel Metal Hydride NiMH rechargeable batteries with a minimum capacity of 650 mAh. Using inappropriate batteries will invalidate your guarantee and may damage the telephone. It means that the handset is not registered with the base station. Ensure you have correctly carried out step 3. If the product has still not registered, please see "Registering manually" on page 55. All additional handsets you purchase will need to be individually registered with the base station before they will work with the BT Diverse 5250. SETTING UP Leave the handset for approx. Ensure that each end of the line cord is fitted into the correct socket. OK Press the OK options button. This will take you back one step. Keep pressing the RED PHONE button to return to the idle screen. To switch the handset power on and off USING Press and hold the RED PHONE button to switch the handset off. Press and hold the RED PHONE button to switch the handset on again. Dial the number Press the HANDSFREE button. The loudspeaker is switched on and you hear the number being dialled. Or If the handset is on the base, simply lift it up and speak. You do not need to press the GREEN PHONE button. This is called Autotalk. The call is transferred to the loudspeaker. Press the DIRECTORY button. MENU OK Press the MENU options button.

Display shows New Entry. To switch to handsfree during a call OK Press the OK options button to enter the name. The first letter of each name, and the first letter after a punctuation mark are automatically shown as capitals. Letters are always added to the left of the cursor. Press to delete from right to left. C 1 Press 1 to enter a blank space. To dial a name and number in the directory Then press the DOWN navigation button to scroll to the exact entry you want. Press the DOWN navigation button to scroll through the names which are listed in alphabetical order. MENU Press the DOWN navigation button until Edit Entry is displayed. Press the DOWN navigation button to scroll to the entry you want to delete. MENU Press the MENU options button. Press the DOWN navigation button until the display shows Delete Entry. OK Press the OK options button to confirm. You hear a confirmation beep. Press the REDIAL options button. Press the DOWN navigation button to scroll to the number you want to copy. Press the DOWN navigation button to select the number for deletion. MENU Press the DOWN navigation button until the display shows Copy to Directory. If you have multiple handsets registered to the base you can make internal calls between handsets. INT Note You can also page all handsets by pressing the PAGE button on the base station. To transfer an external call between handsets Press the INT options button. This enables you to ask another handset user a question and then get straight back to your caller. During a call INT Press the INT options button to display the list of handsets. For more information on BT's Calling Features call BT free on 0800 800 150. The number displayed is dialled. When you have new calls, the icon flashes in the display. Press the ENVELOPE button. Press the DOWN navigation button until the display shows Copy to Directory. OK To delete the whole Calls list Press the MENU options button. Press the DOWN navigation button until the display shows Delete List.

The display shows Calls list The number is displayed. This is to alert you to the other caller waiting to speak to you. MENU Press the OK options button. Display shows Select Services. Press the DOWN navigation button until Cancel Ringback is displayed. To set Call Divert Note Call Divert requires subscription from your Network provider. You may be charged a subscription fee. You can divert all incoming calls to another number where you can be reached. BT CALLING FEATURES You can divert calls Select On or Off. To set onetouch access to your messages MENU Press the RED PHONE button until you reach the idle display. Press the Down button until the display shows Voice

Mail. Press the RED PHONE button until you reach the idle display. To change this setting to Network Mailbox Press the UP button. Press the LEFT or RIGHT navigation button to set the volume level you want. OK Press the RED PHONE button until you reach the idle display. Press the DOWN navigation button to select the ringer melody. To change the display language MENU Press the DOWN navigation button until the display shows Handset Settings. OK Select whether external calls or internal calls OK HANDSET SETTINGS OK Press the OK options button to confirm and save the settings. When you switch autotalk off, you answer all calls by pressing the GREEN PHONE button. You can restore a handset to its factory settings. The handset's registration, the Directory and the Calls list are not affected. When the keyguard is switched on, the display will show the icon. Enter the name you want see page 16. Note OK Press the OK options button to confirm. This name will appear in the internal list of handsets. OK The display show Entry Saved. To change the ringer volume MENU BASE SETTINGS To change the loudspeaker volume MENU Press the MENU options button. Press the DOWN navigation button until the display shows Base Settings. The display shows Audio Settings. Press the DOWN navigations button until the display shows Key Tones.

OK BASE SETTINGS OK OK Press the OK options button. To change the base station PIN OK MENU Press the MENU options button. Press the DOWN navigation button until the display shows Base Reset. Press the DOWN navigation button until the display shows System PIN. OK BASE SETTINGS OK Press the OK options button. This boosts the signal and allows you to use your handset further away from the base station. If you want to use a BT Diverse repeater, you must switch this mode on. ANSWERING MACHINE The factory setting for the answering machine is ON, so you can use it as soon as you have charged up your BT Diverse 5250. To record your own outgoing message Note The minimum outgoing message length is 4 seconds and the maximum length is 2 minutes and 50 seconds. To play your outgoing message MENU Press the Down button until the display shows Voice Mail. The display shows Press "OK" Speak after tone. OK Press the OK options button to confirm you are ready to record your message. Press the DOWN button until the display shows Announcements. OK Press and hold the RED PHONE button to return to the idle screen. Or If you want to delete the Answer Only message Press the DOWN button again to display Delete Announce Only. OK Then, press the OK options button. The display shows Answer Delay Answer delay sets the number of times your BT Diverse 5250 will ring before the answering machine picks up a call and starts playing the outgoing message. Press the DOWN button until the display shows Voice Mail. Press the DOWN button until the display shows Ring Delay. OK You can specify the time limit your callers have to leave a message. The choices are 30 seconds, 60 seconds, 120 seconds this is the factory setting or Maximum remaining record time. This feature can be switched on or off on either the handset or on the base station. The factory setting is on. Press and hold the RED PHONE button to return to the idle screen.

Note During a call you can switch off call screening by pressing the RED PHONE button. To use call screening Quick access button setting MENU Press the MENU options button. This will still happen, even when the answering machine is switched off. The ANSWERING MACHINE button lights up and the available recording time is announced. To switch the answering machine on and off MENU Press the MENU options button. At the start of each message, the number of the message and the day and time the message was received are announced. Note If 2 or more seconds have already been recorded when you take the call, the call will still be displayed as a new message. When all new messages have been played, old messages will follow. New message indicator If there are no new messages, just the old messages will play back. Press the DOWN button until the display shows Delete all. To repeat the current message Press the UP button. OK To skip back to the previous message Press the UP button twice. The display shows Really. The display shows Save Entry. The display shows Entry Saved and you hear a confirmation tone. ANSWERING MACHINE Playback then resumes automatically. Using this code prevents other people from accessing your answering machine functions without your permission. When you end the call, your answering machine will be

switched on. To access and play your answering machine messages from another phone
IMPORTANT Dial your telephone number. This allows you to make internal calls between two
handsets while a third is making an external call. To manually register a BT Diverse 5200 handset to
another base station On the handset to be registered MENU After approximately one minute the
handset will display its internal number. Place your handset into registration mode according to the
instructions in its user guide. Try these solutions to the most common problems. Possible cause
Solution Handset not registering. The base is not powered. There are no batteries in the handset.

Make sure that the power supply is plugged in at the base and switched on. Is another handset using
the line for a long time. Maximum charging power is only possible when no calls are being made. Is
the handset placed on the base properly. Make sure that the handset is placed on the base or in the
charger correctly. You will hear a confirmation tone. Are the batteries in correctly. Check that you
have put the batteries in the right way, you will hear a confirmation tone. All items of equipment
have a Ringer Equivalence Number REN which is used to calculate the number of items that may be
connected to any one telephone line. Switchboard compatibility Generally this telephone may be
connected to switchboards. In the event of any difficulties please consult your switchboard Service
Provider. To set the recall time Note 100 MS is the standard setting for most UK switchboards. To
switch temporarily from pulse to tone dialling You need only adjust this setting if your switchboard
requires a different recall time to the preset recall time of 100ms. MENU Press the MENU options
button. To set a pause before dialling R MENU GENERAL INFORMATION Press the MENU options
button. 8 TUV Press the 8 button. 9WXYZ Press the 9 button. Services and equipment are provided
subject to British Telecommunications plc's respective standard conditions of contract. Registered
Ofce 81 Newgate Street, London EC1A 7AJ.